


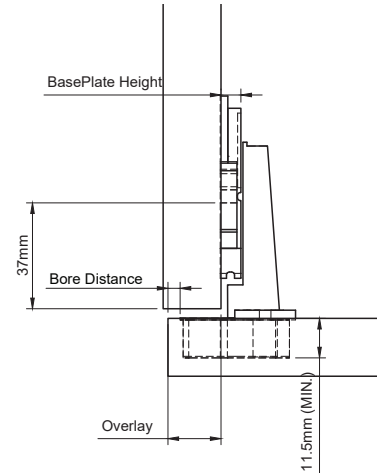

European Concealed Hinges

Full Overlay

Overlay - coverage of the side end of cabinet door											
8	9	10	11	12	13	14	15	16	17	18	
						3	4	5	6	7	0
				3	4	5	6	7			2
			3	4	5	6	7				3
		3	4	5	6	7					4
3	4	5	6	7							6
Bore Distance (tab) from edge of cup bore							Mounting plate height in MM				



Half Overlay

Overlay - coverage of the side end of cabinet door									
2	3	4	5	6	7	8	9	10	
				3	4	5	6	7	0
		3	4	5	6	7			2
	3	4	5	6	7				3
3	4	5	6	7					4
Bore Distance (tab) from edge of cup bore					Mounting plate height in MM				

Conversion Chart

FRAC.	INCH	MM
1/16	.0625	1.588
1/8	.125	3.175
3/16	.1875	4.763
1/4	.25	6.350
5/16	.3125	7.938
3/8	.375	9.525
7/16	.4375	11.113
1/2	.5	12.700
9/16	.5625	14.288
5/8	.625	15.875
11/16	.6875	17.463
3/4	.75	19.050
13/16	.8125	20.638
7/8	.875	22.225
15/16	.9375	23.813
1	1	25.400

Inset Overlay

Overlay - coverage of the side end of cabinet door									
-1	0	1	2	3	4	5	6	7	
6	5	4	3						0
		6	5	4	3				2
			6	5	4	3			3
				6	5	4	3		4
Bore Distance (tab) from edge of cup bore					Mounting plate height in MM				